

#Jenny



Finally I get this ebook, thanks for all these I can get now!

#Rio



Cool! I'am really happy

#Markus Jensen



I did not think that this would work, my best friend showed me this website, and it does! I get my most wanted eBook

#Hun Tsu



wtf this great ebook for free?!

#Che Salsa



My friends are so mad that they do not know how I have all the high quality ebook which they do not!

#Diego Butler



so many fake sites. this is the first one which worked! Many thanks

1. Appearance Description for PoE Wi-Fi Bridge

1. Front Panel

The front panel has the 2-button and status LEDs in the following figure:



Fig 1. Front View

Button	Description
WPS	• To connect WPS to AP(Access Point)
Reset	• Reboot • Reset to Factory Default
LED	Description
Power	<ul style="list-style-type: none"> • Solid Yellow Green: Power on • Off: Power is not supplied to the PoE Wi-Fi Bridge
WLAN	<ul style="list-style-type: none"> • Solid Yellow Green: Wi-Fi Activity are in process • Blinking Yellow Green: Wireless data is being sent or received • Blinking Red: The Wireless signal is weak signal • Off: Wi-Fi access fail
DATA	<ul style="list-style-type: none"> • Blinking Yellow Green: Ethernet link is detected • Off: No data transmission on the port
CAMERA	<ul style="list-style-type: none"> • Blinking Yellow Green: CAMERA link is detected • Off: No data transmission on the port

Table 1. Front Description

[Download PDF version of :
Innotek User Manual](#)